



Angular Offset Motion

Angular movement is defined as the bending of the hose so that the ends are no longer parallel. Amount of movement is measured in degrees from centerline of the hose if it were installed straight.

		Minimum Live Length of Hose For Angular Offset Motion													
		Degree of Angular Motion = θ													
CENTERLINE BEND RADIUS (in.) = R		10	15	20	25	30	40	50	60	70	80	90	120	150	180
	2		0.4	0.6	0.7	0.9	1.1	1.4	1.8	2.1	2.5	2.8	3.2	4.2	5.3
3		0.6	0.8	1.1	1.4	1.6	2.1	2.7	3.2	3.7	4.2	4.8	6.3	7.9	9.5
4		0.7	1.1	1.4	1.8	2.1	2.8	3.5	4.2	4.9	5.6	6.3	8.4	10.5	12.6
5		0.9	1.4	1.8	2.2	2.7	3.5	4.4	5.3	6.2	7.0	7.9	10.5	13.1	15.8
6		1.1	1.6	2.1	2.7	3.2	4.2	5.3	6.3	7.4	8.4	9.5	12.6	15.8	18.9
7		1.3	1.9	2.5	3.1	3.7	4.9	6.2	7.4	8.6	9.8	11.0	14.7	18.4	22.0
8		1.4	2.1	2.8	3.5	4.2	5.6	7.0	8.4	9.8	11.2	12.6	16.8	21.0	25.2
9		1.6	2.4	3.2	4.0	4.8	6.3	7.9	9.5	11.0	12.6	14.2	18.9	23.6	28.3
10		1.8	2.7	3.5	4.4	5.3	7.0	8.8	10.5	12.3	14.0	15.8	21.0	26.2	31.5
11		2.0	2.9	3.9	4.8	5.8	7.7	9.6	11.6	13.5	15.4	17.3	23.1	28.8	34.6
12		2.1	3.2	4.2	5.3	6.3	8.4	10.5	12.6	14.7	16.8	18.9	25.2	31.5	37.7
13		2.3	3.5	4.6	5.7	6.9	9.1	11.4	13.7	15.9	18.2	20.5	27.3	34.1	40.9
14		2.5	3.7	4.9	6.2	7.4	9.8	12.3	14.7	17.2	19.6	22.0	29.4	36.7	44.0
15		2.7	4.0	5.3	6.6	7.9	10.5	13.1	15.8	18.4	21.0	23.6	31.5	39.3	47.2
16		2.8	4.2	5.6	7.0	8.4	11.2	14.0	16.8	19.6	22.4	25.2	33.6	41.9	50.3
17		3.0	4.5	6.0	7.5	9.0	11.9	14.9	17.9	20.8	23.8	26.8	35.7	44.6	53.5
18		3.2	4.8	6.3	7.9	9.5	12.6	15.8	18.9	22.0	25.2	28.3	37.7	47.2	56.6
19		3.4	5.0	6.7	8.3	10.0	13.3	16.6	19.9	23.3	26.6	29.9	39.8	49.8	59.7
20		3.5	5.3	7.0	8.8	10.5	14.0	17.5	21.0	24.5	28.0	31.5	41.9	52.4	62.9
22		3.9	5.8	7.7	9.6	11.6	15.4	19.2	23.1	26.9	30.8	34.6	46.1	57.6	69.2
24		4.2	6.3	8.4	10.5	12.6	16.8	21.0	25.2	29.4	33.6	37.7	50.3	62.9	75.4
26		4.6	6.9	9.1	11.4	13.7	18.2	22.7	27.3	31.8	36.4	40.9	54.5	68.1	81.7
28		4.9	7.4	9.8	12.3	14.7	19.6	24.5	29.4	34.3	39.1	44.0	58.7	73.4	88.0
30		5.3	7.9	10.5	13.1	15.8	21.0	26.2	31.5	36.7	41.9	47.2	62.9	78.6	94.3
35		6.2	9.2	12.3	15.3	18.4	24.5	30.6	36.7	42.8	48.9	55.0	73.4	91.7	110.0
40		7.0	10.5	14.0	17.5	21.0	28.0	35.0	41.9	48.9	55.9	62.9	83.8	104.8	125.7
45		7.9	11.8	15.8	19.7	23.6	31.5	39.3	47.2	55.0	62.9	70.7	94.3	117.9	141.4
50		8.8	13.1	17.5	21.9	26.2	35.0	43.7	52.4	61.1	69.9	78.6	104.8	130.9	157.1
60		10.5	15.8	21.0	26.2	31.5	41.9	52.4	62.9	73.4	83.8	94.3	125.7	157.1	188.5
70		12.3	18.4	24.5	30.6	36.7	48.9	61.1	73.4	85.6	97.8	110.0	146.7	183.3	220.0
80		14.0	21.0	28.0	35.0	41.9	55.9	69.9	83.8	97.8	111.8	125.7	167.6	209.5	251.4
90		15.8	23.6	31.5	39.3	47.2	62.9	78.6	94.3	110.0	125.7	141.4	188.5	235.7	282.8
100		17.5	26.2	35.0	43.7	52.4	69.9	87.3	104.8	122.2	139.7	157.1	209.5	261.8	314.2

Formula: $L = \frac{\pi R \theta}{180}$

L = Live hose length (inches)

$\pi = 3.1416$

R = Minimum centerline bend radius for constant flexing

θ = Angular deflection (degrees)

